


OPC User Guide


1. Open the application to enter the page, click six time in the lower left corner

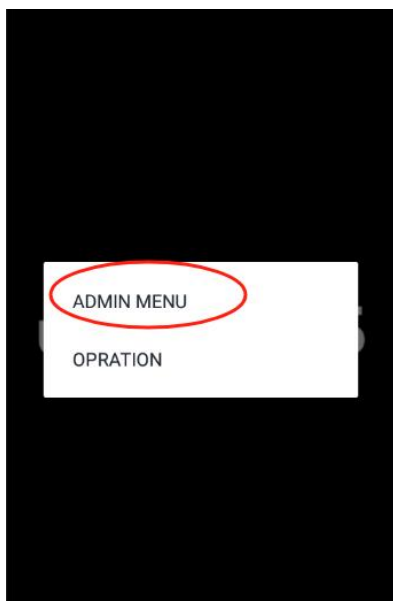


Click ADMN MENU and enter the password :99999999 to enter the next page




2. Click SETTING

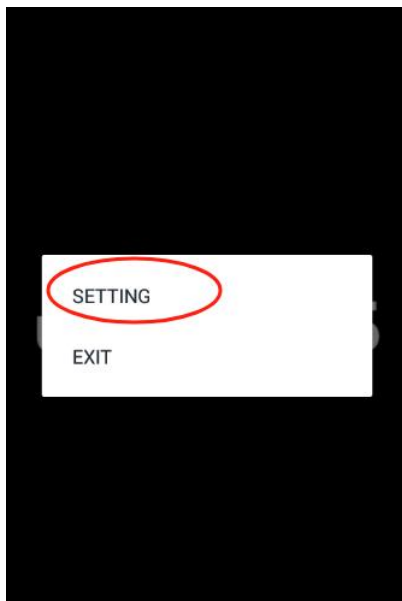

3. Click [Protocol type]

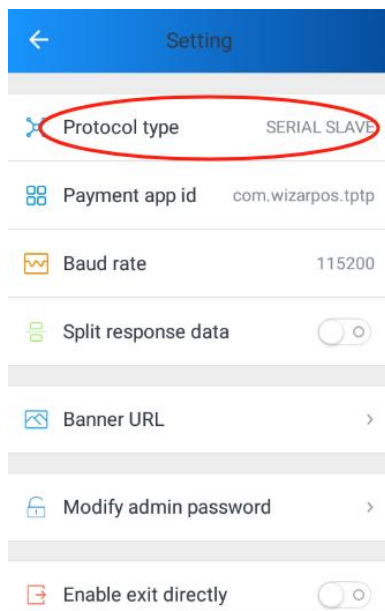

4. Choose correct communication mode

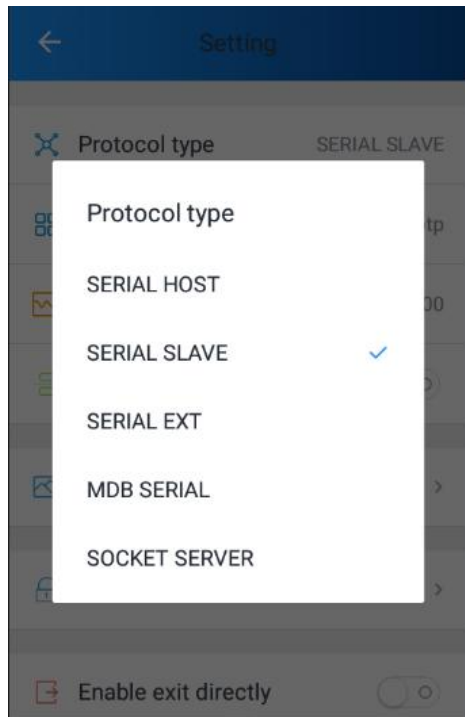

- SERIAL SLAVE: use usb cable
- SERIAL HOST: use UUCable
- MDBS SERIAL: use MDB
- SERIAL EXT: use physical serial port
- SOCKET SERVER: use network